
Installation Instructions >> Pannier Racks >> BMW F800GS



Installation Instructions >> Pannier Racks >> BMW F800GS

1. Remove the passenger handle by using a ratchet and T40 torx bit.



2. Mount the right side pannier.



3. Secure it on by using the supplied M8x30mm bolts. Leave it loose.



4. Insert the supplied M8 long bolt to secure the rear end of the pannier racks.



Installation Instructions >> Pannier Racks >> BMW F800GS

5. Mount the left side pannier. Be careful when feeding the mounting tab between the exhaust muffler and the subframe.




6. Insert and hand-thread both M8 Allen bolts. Leave it loose!



7. Mount the rear cross brace.



8. Add all four M6 hex bolts, washers and locking nuts. Using a 10mm socket and ratchet on one side while holding down on the other with a 10mm ratchet tighten the bolts and nuts.

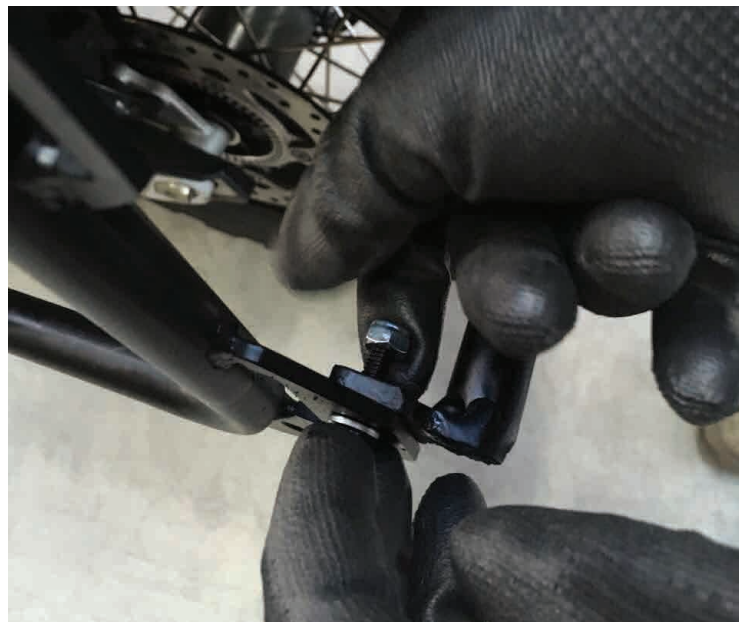

Installation Instructions >> Pannier Racks >> BMW F800GS

9. Finally, tighten all the bolts and nuts and double check them after a test ride.



BMW F800GS Pannier Racks - Hardware kit and recommended tools



1. 2x M8x50mm Allen bolts
2. 4x M6x16mm hex head bolts+washers+locking nut
3. 6x M8x30mm Allen bolts+washers
4. 10mm wrench
5. Ratchet
6. 6mm Allen key
7. 10mm socket