



**CUTBACK
MOTORCYCLES**

2026 Honda Transalp 750

ASSEMBLY GUIDE | **CRASH BARS**

Universal Tools Required

- ☐ Ratchet + Extension
- ☐ Universal Joint
- ☐ Torque Wrench (*recommended*)
- ☐ Blue Loctite (*recommended*)

Specific Tools Required


- ☐ 5mm Allen Key / Socket
- ☐ 8mm Allen Key / Socket
- ☐ 8mm Hex Socket
- ☐ 10mm Hex Socket
- ☐ 12mm Hex Socket
- ☐ 14mm Hex Socket
- ☐ 17mm Hex Socket
- ☐ 10mm Wrench/Spanner
- ☐ 12mm Wrench/Spanner
- ☐ 13mm Wrench/Spanner
- ☐ 15mm Wrench/Spanner

Number	QTY	Specifications	Torque (NM)
<u>1</u>	8	OEM Hardware	-
<u>2</u>	1	M10 x 173mm Bolt	*
<u>3</u>	1	M10 x 80mm Bolt	*
<u>4</u>	5	M10 Washer	-
<u>5</u>	3	M10 Nyloc Nut	
<u>6</u>	2	M8 x 45mm Bolt	*
<u>7</u>	2	M8 x 20mm Bolt	
<u>8</u>	10	M8 Washer	-
<u>9</u>	4	M8 Nyloc Nut	-
<u>10</u>	2	M6 x 20mm Bolt	8
<u>11</u>	8	M6 Washer	-

12	2	M6 Nyloc Nut	-
----	---	--------------	---

* PLEASE REFER TO THE OWNER'S (OR SERVICE) MANUAL FOR OEM TORQUE SPECIFICATIONS.*


STEP 1 (Remove OEM Hardware) :

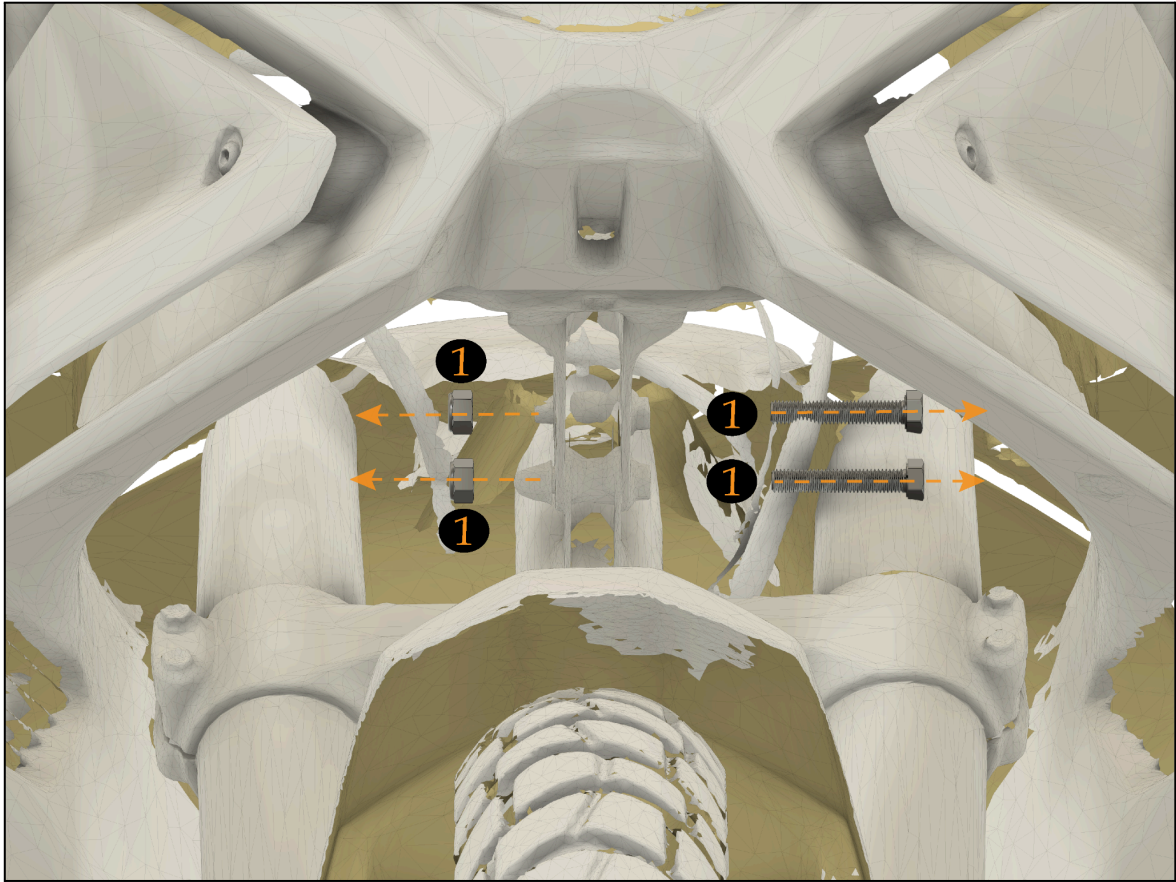


STEP 2 (Install OM Bracket) :




STEP 3 (Left Side - OEM Hardware Removal (L+R Side)) :

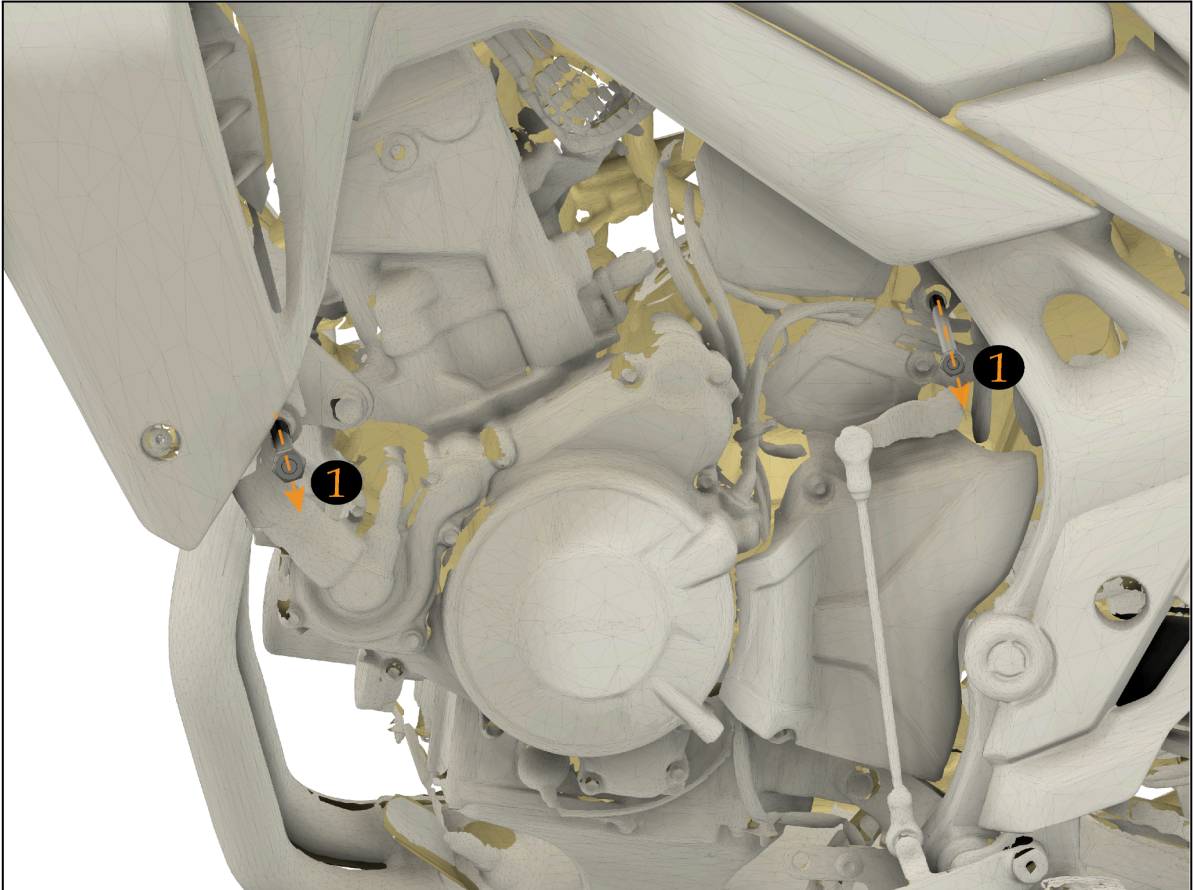


STEP 4 (Left Side - Crash Bar Installation) :

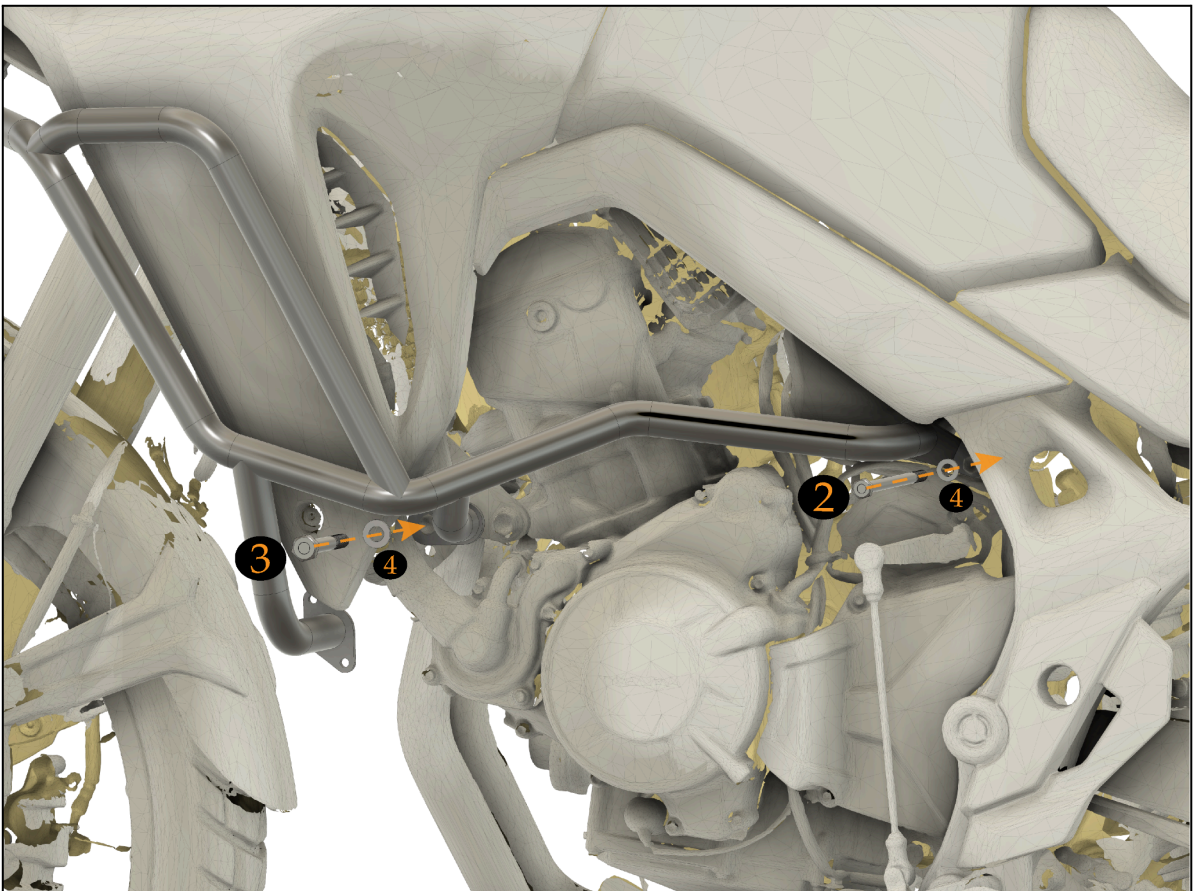


STEP 5 (Right Side - Crash Bar Installation) :

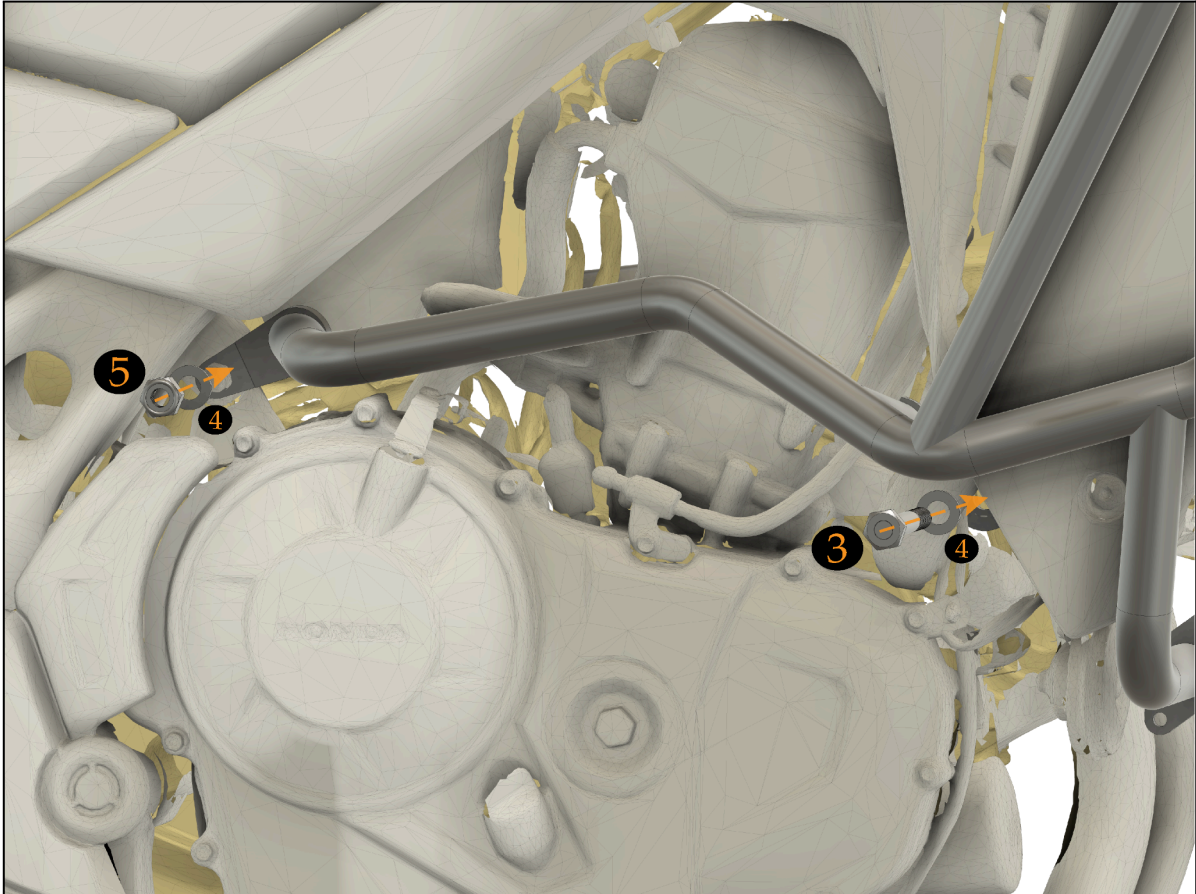


STEP 6 (Mount To Head Stem) :

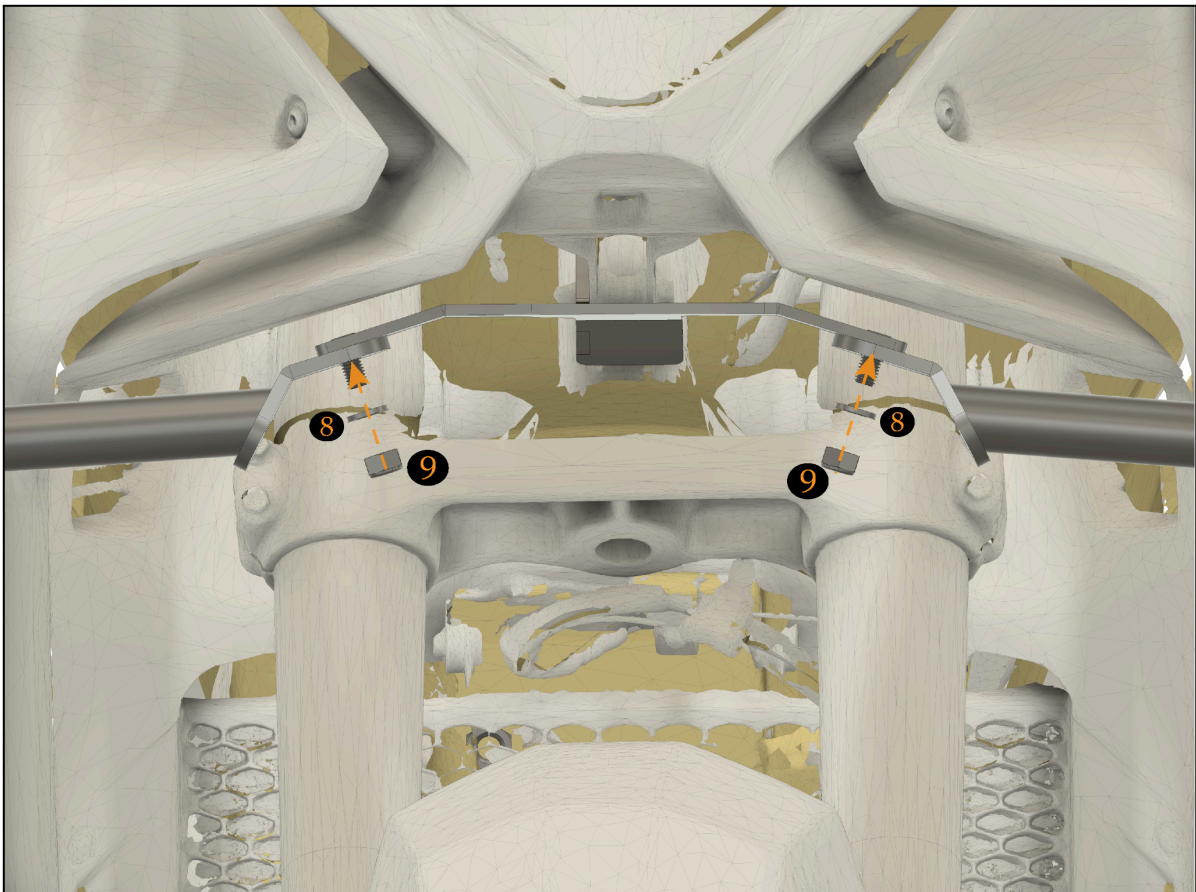


STEP 7 :

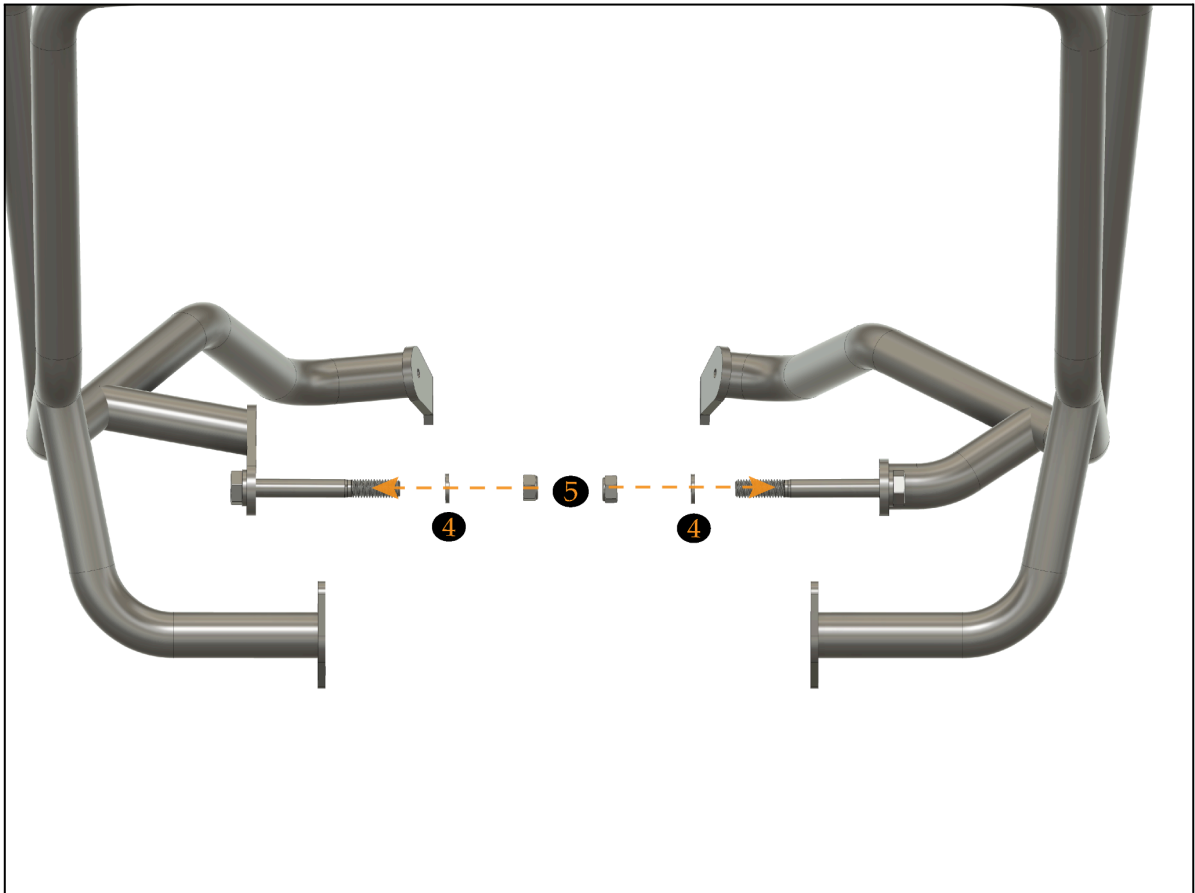

STEP 8 (Install Cross Brace) :

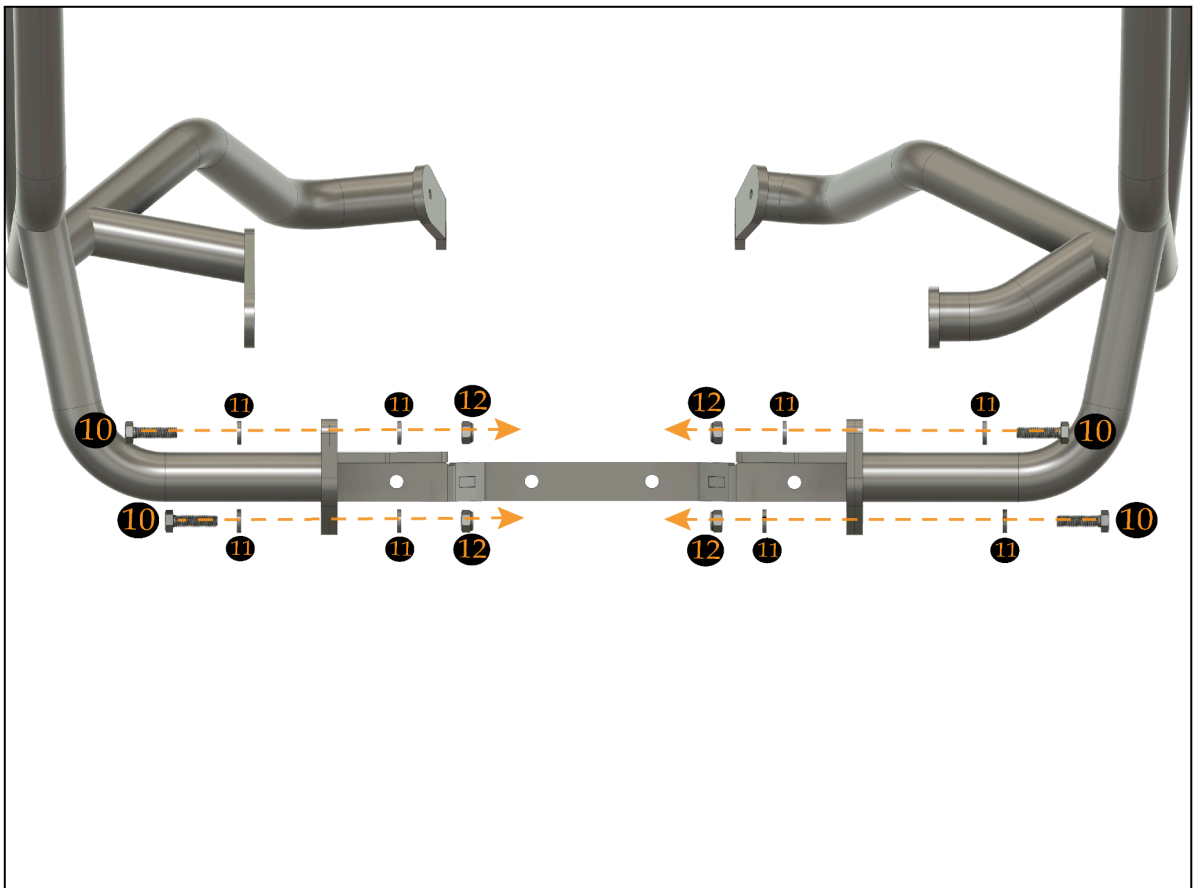

STEP 9 (Install Cross Brace Support Bracket) :

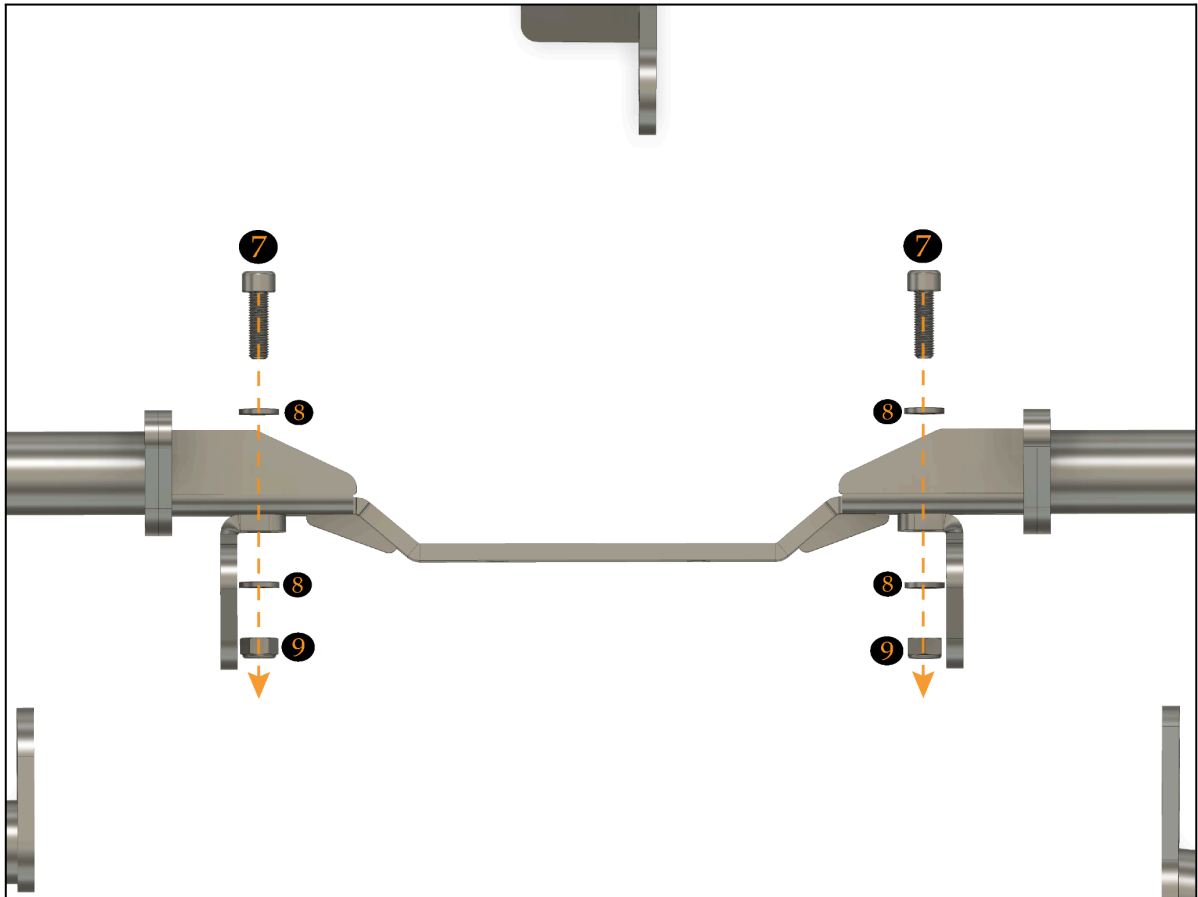

* Torque Disclaimer *

Torque specs provided by Outback Motortek are for guidance only and may reference OEM data. Incorrect torque application from miscalibrated or improperly stored torque wrenches (which can drift by up to 20% within 12 months) may cause broken studs or mounting failures. Always return torque wrenches to 0 ft-lbs when storing, and use blue Loctite (medium strength) on all fasteners to help prevent loosening. Outback Motortek is not responsible for damage or failures caused by mis-torquing or improper installation.